


HD82

Spare Parts List - Lista części zamiennych - Reservdelista -
ErsatzteillisteListe de pieces detachées - Lista de recambios

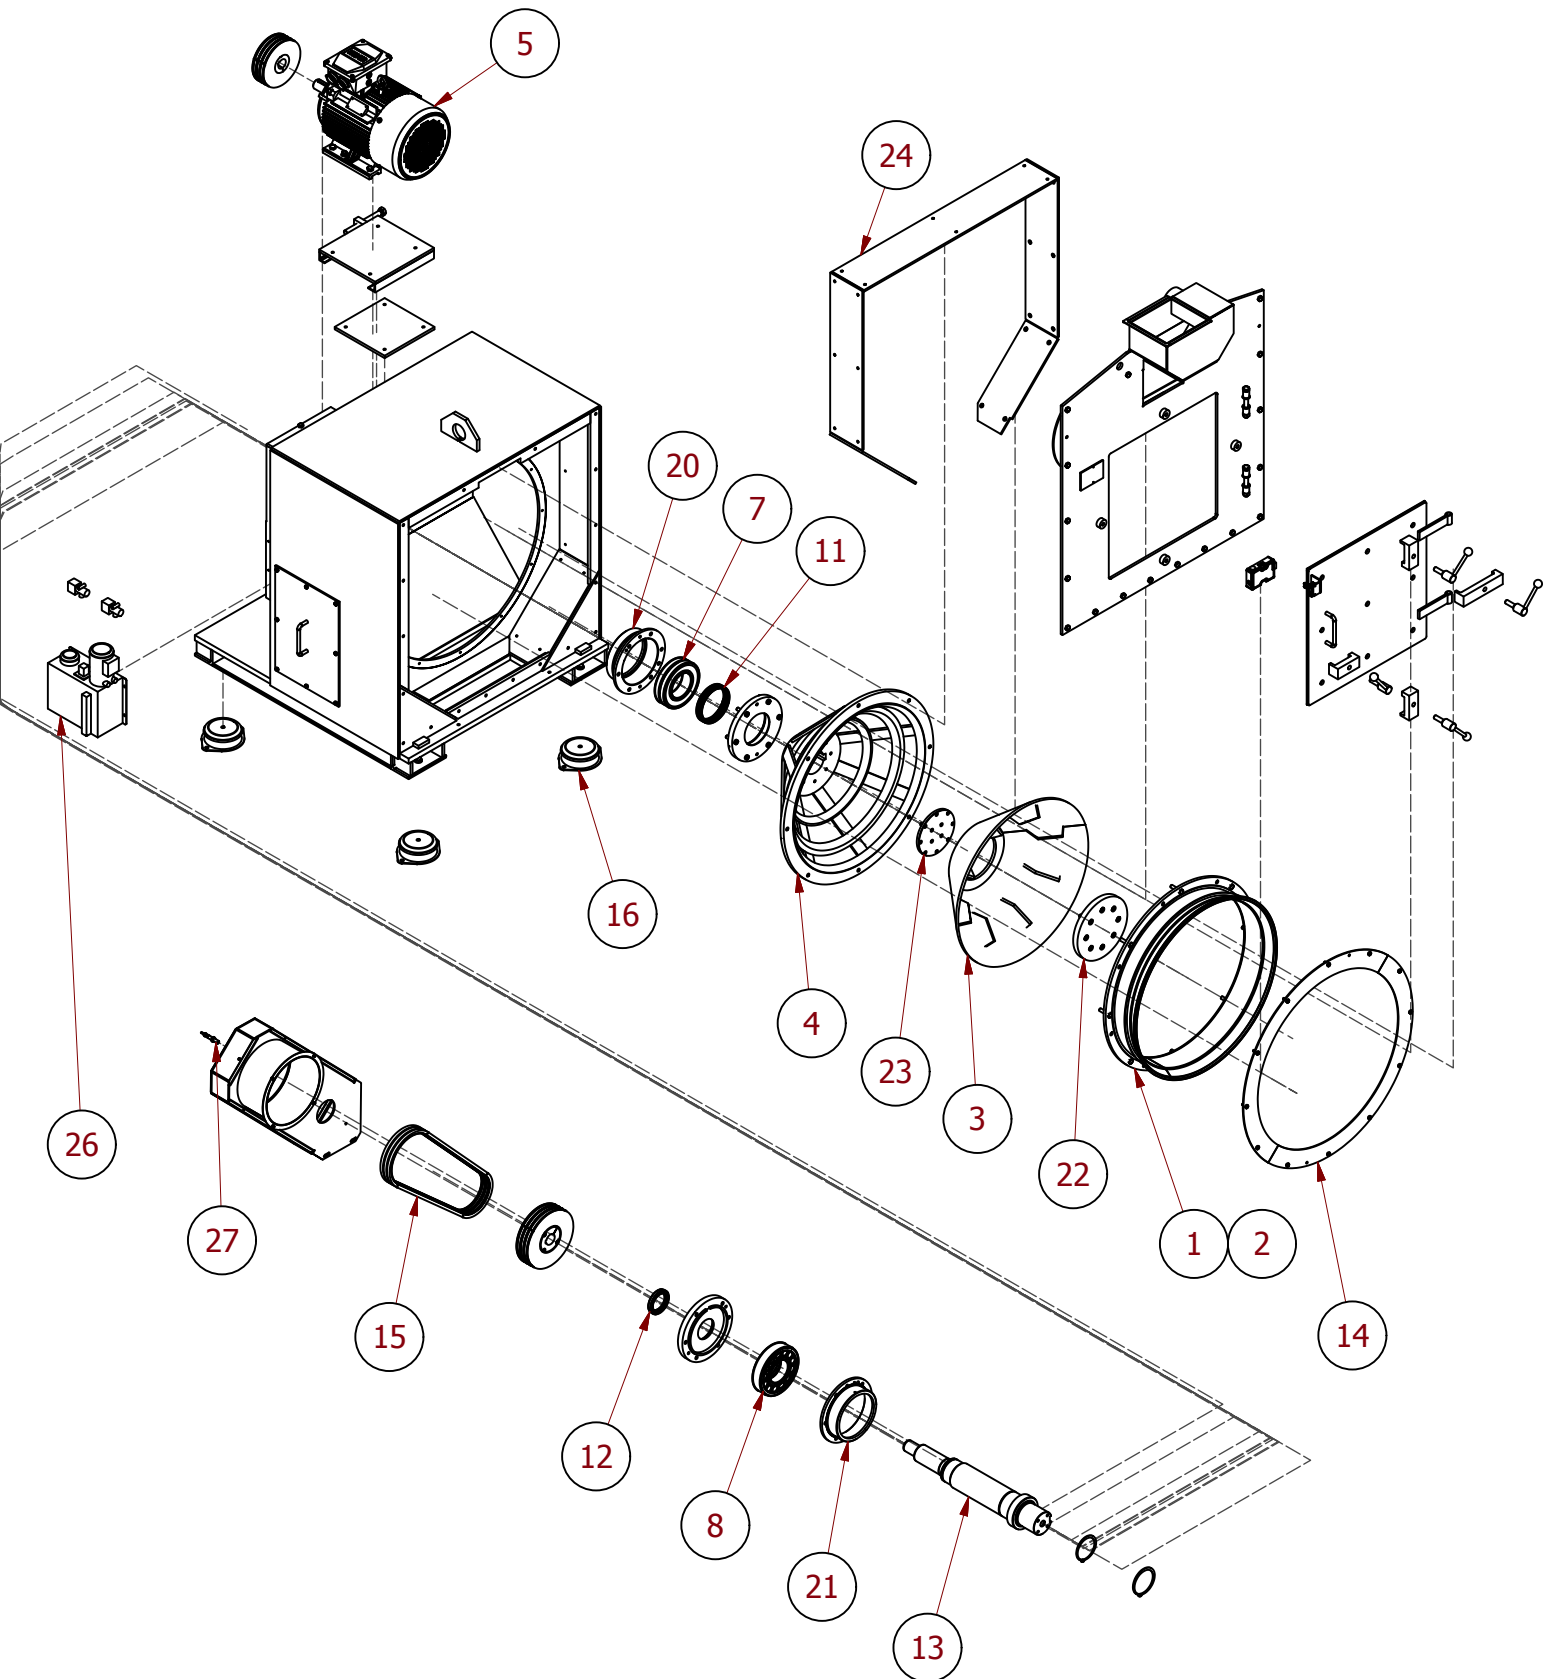

No.	Qty	Item number	Description	Part type
27	1	73000534	HD82/HD100 Rotation Sensor	Spare Part
26	1	73002126	HD82/HD100 Lubricant unit	Spare Part
25	1	73000495	HD82/HD100 Door Seal	Spare Part
24	1	73000240	HD82 Antierosive Insert Hardox	Wear part
23	1	73001325	HD82 Shaft plate	Spare Part
22	1	73001324	HD82 Fixing plate for cone	Spare Part
21	1	73000535	HD82 Bushing rear bearing	Spare Part
20	1	73000243	HD82 Bushing front bearing	Spare Part
19	1	76374727	Rubber - coolant outlet	Wear part
18	1	76374726	Rubber - swarf outlet	Wear part
17	1	76375257	Rubber - swarf inlet	Wear part
16	1	76374723	Vibration absorber (4 pcs)	Spare Part
15	1	76374725	V-Belt (3 pcs)	Spare Part
14	1	76376599	Labyrinth seal	Wear part
13	1	76375236	Shaft (complete incl. bearing)	Spare Part
12	1	76376587	Radial seal CD 75x105x13 rear	Spare Part
11	1	76376586	Radial seal DB 140x160x13 front (2pcs)	Spare Part
10	1	76376602	HD82 Bearing cover; Front	Spare Part
9	1	76376612	HD82 Bearing cover: Rear	Spare Part
8	1	76374733	Bearing (rear)	Spare Part
7	1	76374731	Bearing (front)	Spare Part
6	1	76374732	Shaft	Spare Part
5	1	76374734	Motor 11 kW (400v 3-ph 50 Hz)	Spare Part
4	1	76374729	Basket	Spare Part
3	1	76374728	Drum - stainless	Wear part
2	1	76375235	Screen 0,7 mm	Wear part
1	1	76374724	Screen 0,5 mm	Wear part